

*Three separate units showing

Parts:

1. Stainless Steel Scale
 2. Moving Sensor
 3. Digital Display
 4. Function keys
 5. Display Panel Arm
 6. Cable - 76 inch long
 7. Horizontal Bracket
- Battery: 3V CR2032 (included)

Item#	Range	Reading	Accuracy
35-806-A	0-6"	0.001"/0.01mm/Fraction	0.001"/0-6"
35-812-A	0-12"	0.001"/0.01mm/Fraction	0.0015"/0-12"
35-824-A	0-24"	0.001"/0.01mm/Fraction	0.002"/0-24"
35-832-A	0-32"	0.001"/0.01mm/Fraction	0.0025"/0-32"
35-838-A	0-38"	0.001"/0.01mm/Fraction	0.003"/0-38"

Function Keys:

1. ON/ OFF: turn unit ON or OFF
2. in/mm/F: switch reading unit among inch, metric, inch fraction
3. Origin: Press key for 3 seconds to set Origin
4. INC: Incremental (relative) reading. Using INC, zero may be set at any location in any mode
5. Preset: Preset measurement reading to a desire number
6. Hold: Hold readings on the digital display

Using Origin:

Long press (3 seconds) Origin key to set a origin zero. After setting, the Origin zero is the absolute zero that the readout will memorize and recognize everytime when unit is turned on.

Using Preset:


Preset Function to preset any desirable measurement reading under inch decimal or metric decimal mode directly. To set Preset value:

1. Long press (3 seconds) Preset key unit "P" starts flashing on the digital display
2. Long press Preset again, the first digit starts flashing
 - 2.1 Short press Preset to change number between 0 to 9
 - 2.2 Long press Preset to move to the next digit.
3. Repeat step 2 until all digits are set, then long press Preset again, "P" starts flashing on the digital display.
4. Short press Preset to exit setting, "P" stops flashing.

**Note: When Preset function is use, Origin function is deactivated. By pressing the Origin key, it will only read the Preset value.

Using INC (Increment):

User can use INC to set increment (relative) zero when a value is been preset under Preset function. Press INC to active the function. "INC" will display on the screen. Long press INC to disable the function. Display will switch back to normal reading.

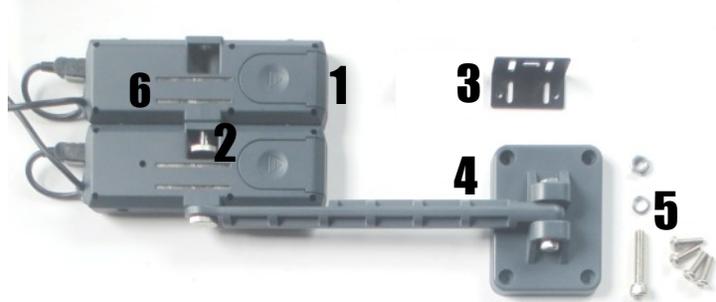

Parts (rear) & Readout Panel Assembly

1. Battery cover: slide to open and close to change battery.
2. Panel Locking Screw (combine two or more separate Readouts into one unit)
3. Vertical Bracket (use in vertical installation if needed)
4. Display Panel Arm and Base
5. Screws and nuts:
 - 5.1 Use the long screw on one side; spacer and nut on the other side to secure the Display Panel Arm to the Base
 - 5.2 Use the four short mounting screws to secure the Base on a wall or any machine (none-hazard) surface. Screw size: M4.
6. Readout Magnetic back: stick the Readout(s) to any metal surface when Display Panel Arm is not in use.

Trouble Shooting

1. Display flashing as unit tuned on: please change batteries (2 pieces 3V 2032)
2. Display not turning on: 1. Change batteries; 2. If changing batteries do not resolve the issue, please check all battery contact points in the battery compartment. Make sure all battery contact points are in the correct positions.